 


Start

 
 
Remote with Aim Anywhere

1 Meet Your Remote

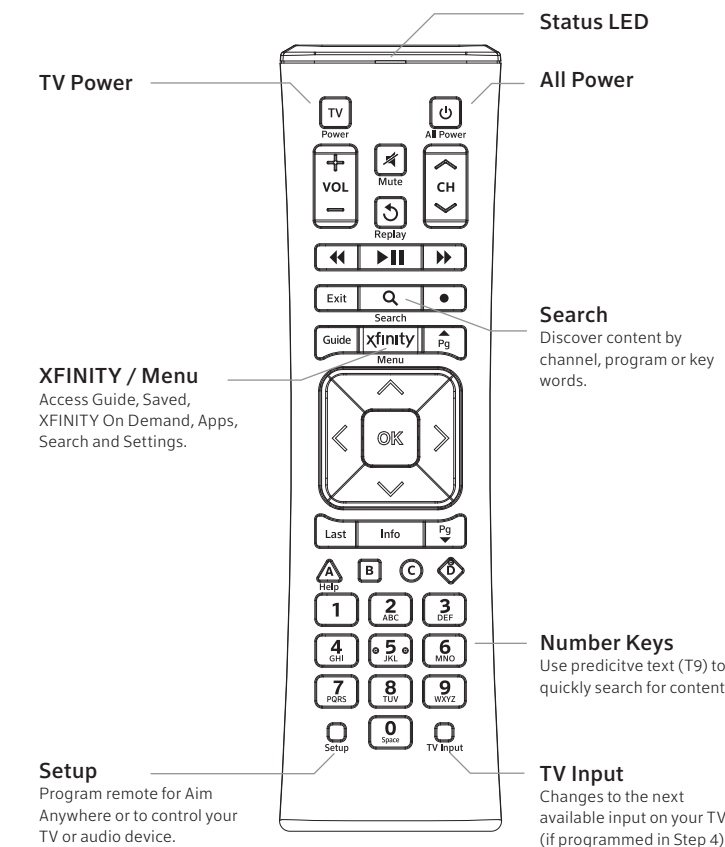

2 Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

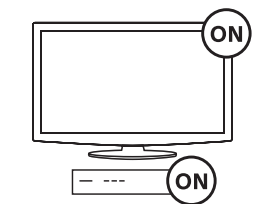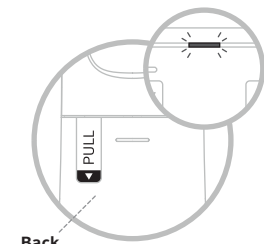



A Pick up your remote and remove the **"Pull" tab** (on back) by **pulling away** from the remote. The Status LED will **blink green** four times as the remote powers up (about 5 seconds).

B Turn on your **TV**.

C Turn on your **set-top box**.

3 Pair Remote for "Aim Anywhere" Control

  Control your set-top box without having to point at it, even when it is inside a cabinet or entertainment center.

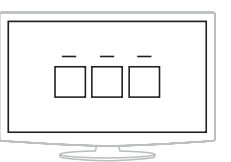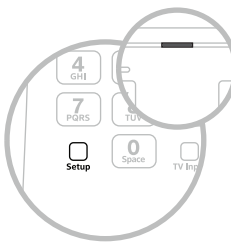

A Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.

B Press the **XFINITY** button.

 
 
 
C Follow the on-screen instructions to enter the **3-digit code** that appears.

Once the code is correctly entered, your XFINITY Remote is paired with the device.

Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.

Need to remove Aim Anywhere control? Press and hold the **Setup** button on the remote until the status LED changes from **red to green**. Press **A** on the remote. If the status LED **blinks green twice**, you have successfully removed Aim Anywhere.

4 Control Your TV's Power and Volume

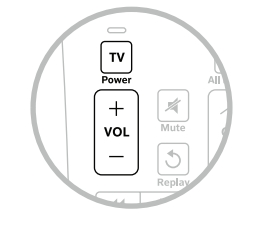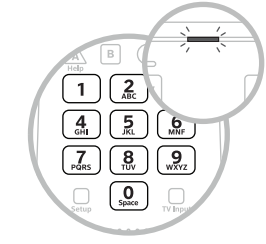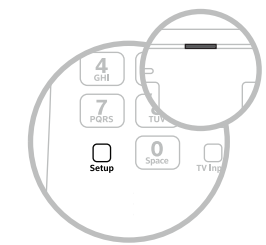

A Using the list on the right, find the first **5-digit code** for your TV manufacturer.

B Press and hold the **Setup** button (about 3 seconds) until the Status LED changes from **red to green**.

C Enter in the **first** 5-digit code for your TV manufacturer. The Status LED should **blink green twice**.

D Verify that the code was accepted by using your remote to adjust **volume** and turn the TV **on and off**.

Not working? Try the second code listed. Still not working? Visit xfinity.com/remotes for a complete list of manufacturer codes.

Popular Manufacturer Codes

LG	10178, 11265
Panasonic	10051, 10250
Samsung	10812, 10060
Sanyo	10154, 10159
Sony	10000, 11100
Sharp	10093, 10165
Toshiba	10156, 11156
Vizio	11758, 11756

If your code isn't listed or you would like to control an audio device, visit xfinity.com/remotes.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced remote control/TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

 
The user is cautioned that changes and modifications made to this equipment without the approval of the manufacturer could void the user's authority to operate this equipment. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Inicio

Control remoto con Aim Anywhere





1 Conozca su control remoto

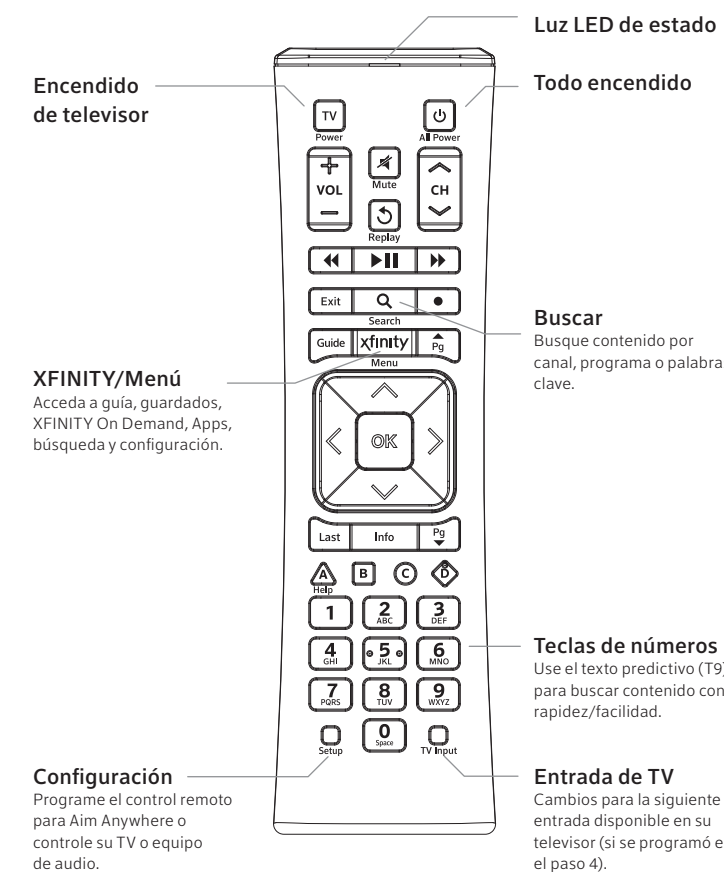

2 Encienda su control remoto

  Su control remoto se le entrega con baterías AA ya instaladas, pero no activado. A continuación se muestra cómo debe encenderlo la primera vez.

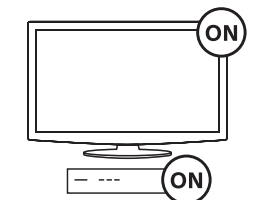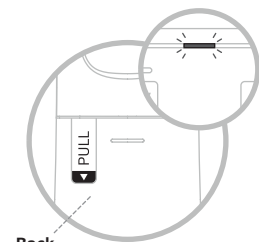



A Tome su control remoto y quite la pestaña “Pull” (situada en la parte posterior) **separándola** del control remoto. La luz LED de estado **parpadeará en verde** cuatro veces mientras se enciende el control remoto (unos 5 segundos).

B Encienda su **televisor**.

C Encienda su **decodificador**.

3 Sincronice el control remoto para controlar “Aim Anywhere”

  Controle su decodificador sin tener que apuntar hacia él, incluso si está dentro de un armario o en un centro de entretenimiento.

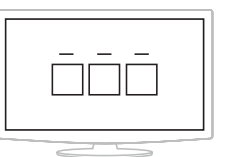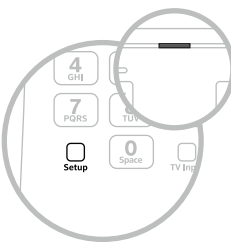

A Mantenga presionado el botón **Setup** unos 3 segundos, hasta que la luz LED de estado cambie **de rojo a verde**.

B Presione el botón **XFINITY**.

 
 
 
C Siga las instrucciones en pantalla para ingresar el código de **3 dígitos que aparece**.

Una vez que el código se haya ingresado correctamente, su control remoto de XFINITY queda sincronizado con el aparato.

¿No funciona? Asegúrese de que ha retirado la pestaña junto a las baterías de su control remoto, su TV está encendido y ha ingresado el código de 3 dígitos correctamente en la pantalla del televisor.

¿Necesita eliminar el control Aim Anywhere? Mantenga presionado el botón **Setup** del control remoto hasta que la luz LED de estado cambie **de rojo a verde**. Presione **A** en el control remoto. Si la luz LED de estado **parpadea dos veces en color verde**, eliminó satisfactoriamente el control Aim Anywhere.

4 Controle el encendido y el volumen del televisor

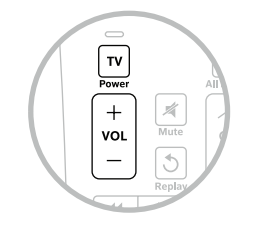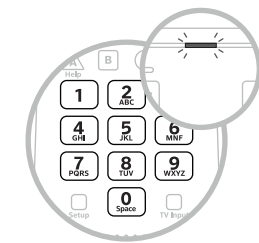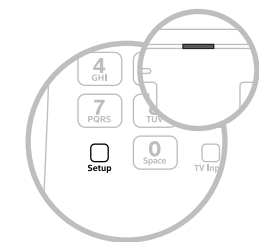

A Encuentre en la lista de la derecha el primer **código de 5 dígitos** correspondiente al fabricante de su televisor.

B Mantenga presionado el botón **Setup** unos 3 segundos, hasta que la luz LED de estado cambie **de rojo a verde**.

C Ingrese el **primer** código de 5 dígitos correspondiente al fabricante. La luz LED de estado debe **parpadear en color verde dos veces**.

D Verifique que el código ha sido aceptado usando su control remoto para ajustar el **volumen y encender y apagar** el televisor.

¿No funciona? Pruebe el segundo código de la lista. ¿Aún no funciona? Visite xfinity.com/remotes para una obtener lista completa de códigos de fabricantes.

Códigos de fabricantes más comunes

LG	10178, 11265
Panasonic	10051, 10250
Samsung	10812, 10060
Sanyo	10154, 10159
Sony	10000, 11100
Sharp	10093, 10165
Toshiba	10156, 11156
Vizio	11758, 11756

Si su código no está en la lista o le gustaría controlar un equipo de audio, visite xfinity.com/remotes.

Need help?
Visit xfinity.com/xtv

Keep for future reference, but if you decide to toss, please recycle.

Get Started Guide v.1.0